

Quick Installation Instructions for NVR

1. HDD Installation


1. Ensure Power supply has been disconnected, open the case cover;



2. Fix the HDD in the case;



3. Connect HDD data line, power line ;

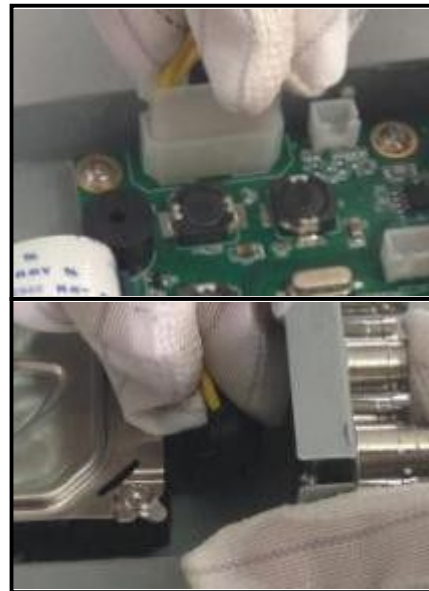


4. Install the cover.




2. Device Connection

2.1 After installing the hard drive, the NVR host panel wiring diagrams, refer to the following section of the hardware shown in Figure devices to connect.

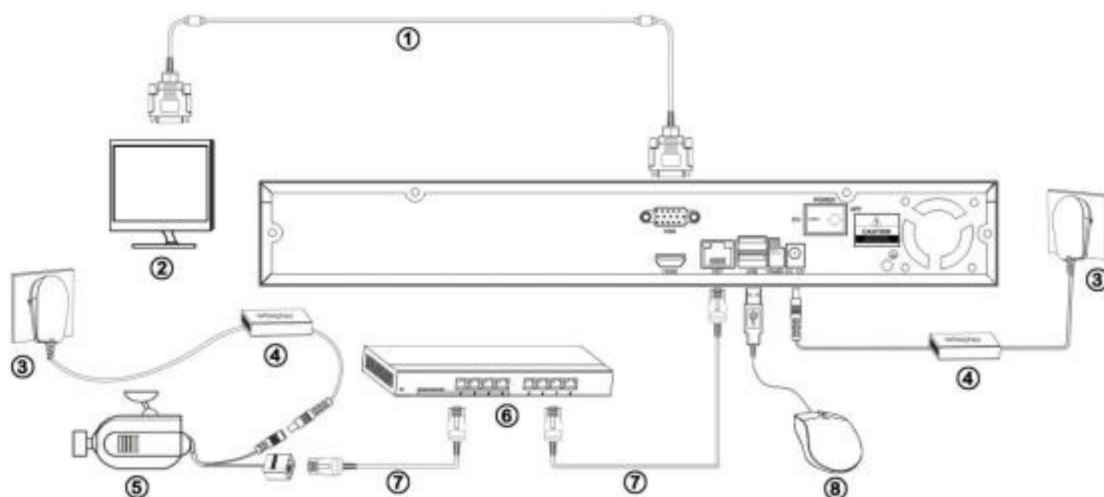


No.	Hardware name
1	VGA cable
2	Monitor
3	Outlet
4	Power Adapter
5	IPC
6	Switch
7	Network cable
8	Mouse


2.2 After installing the hard drive, POE Ethernet port after more than a suit NVR host panel wiring diagram can refer to the content of some of the equipment into hardware.

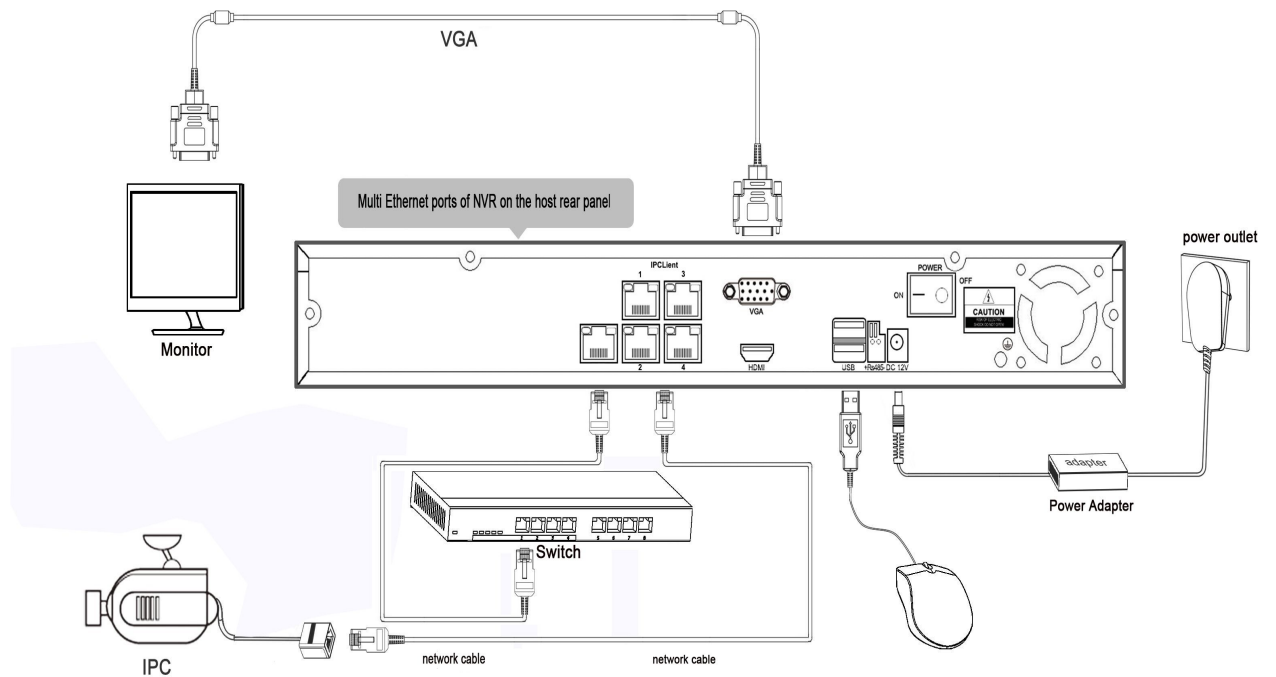

2.3 Cable connection is RJ-45 direct connection method

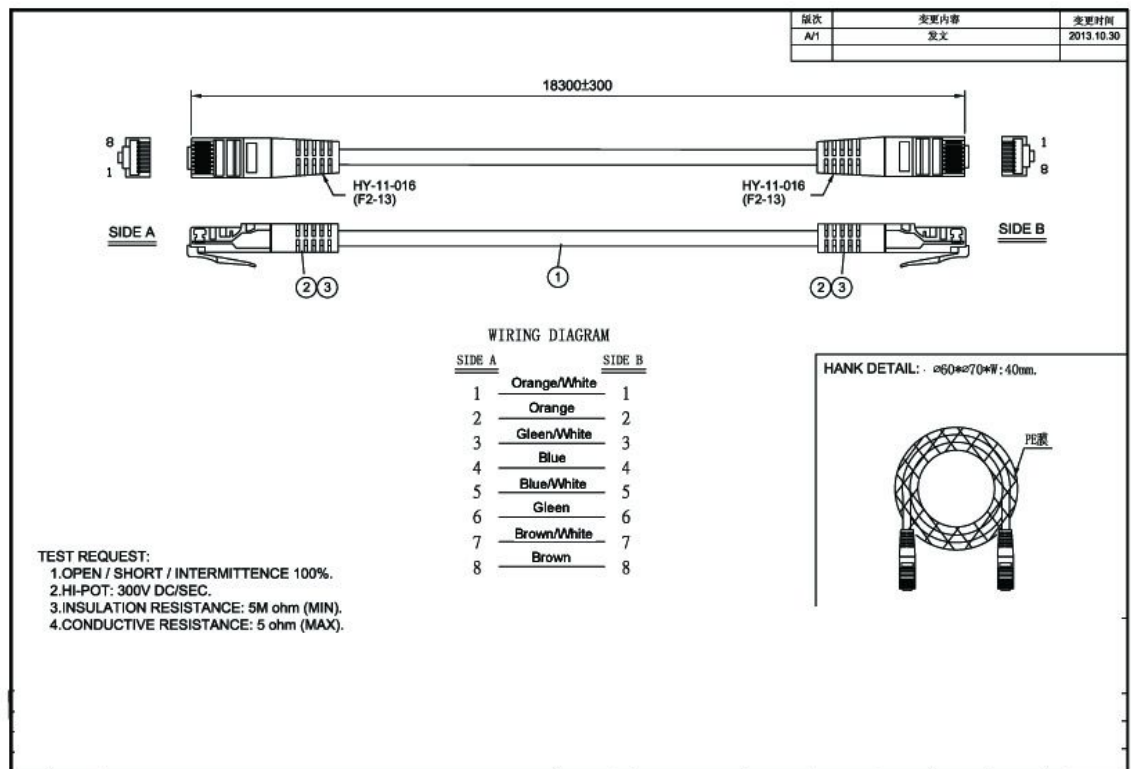

3. Login

After the Devices connected, Press the power button , then the NVR booting, Enter the username and password login the system. The default username is "admin", password is "".




4. Connect IPC Devices


1. Right click|System Setup|Net Settin| Connection set the IP of this NVR;



2. Right click|IP Camera,click[search],then can search the IP Camera in this lan;

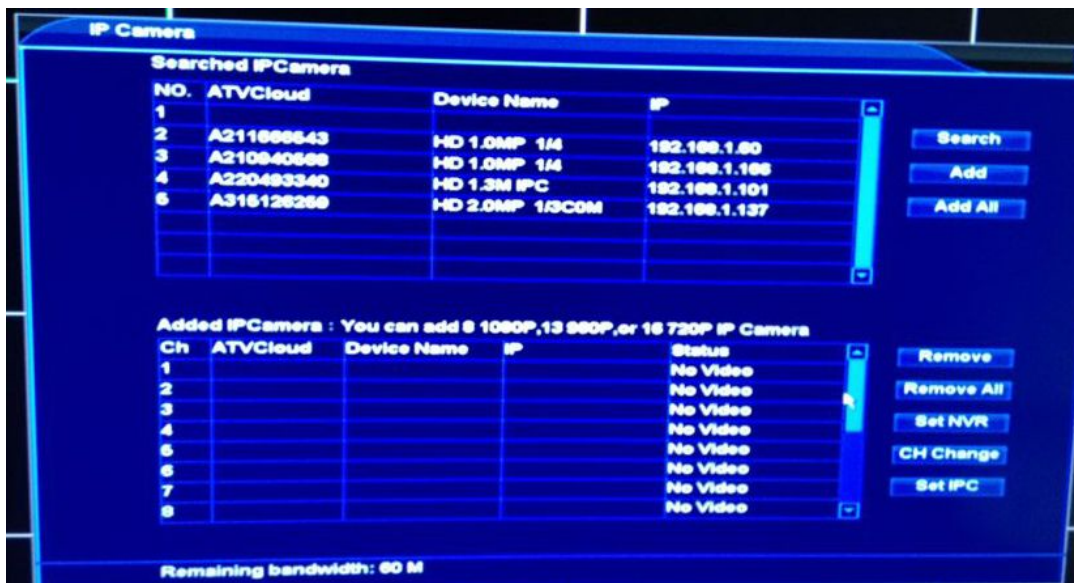

3. Click any ip camera,click button [Add],can put this ip camera into the right device list,and connected successful;Click the button [Add All],can put all ip camera into the right device list,and connected all successful.


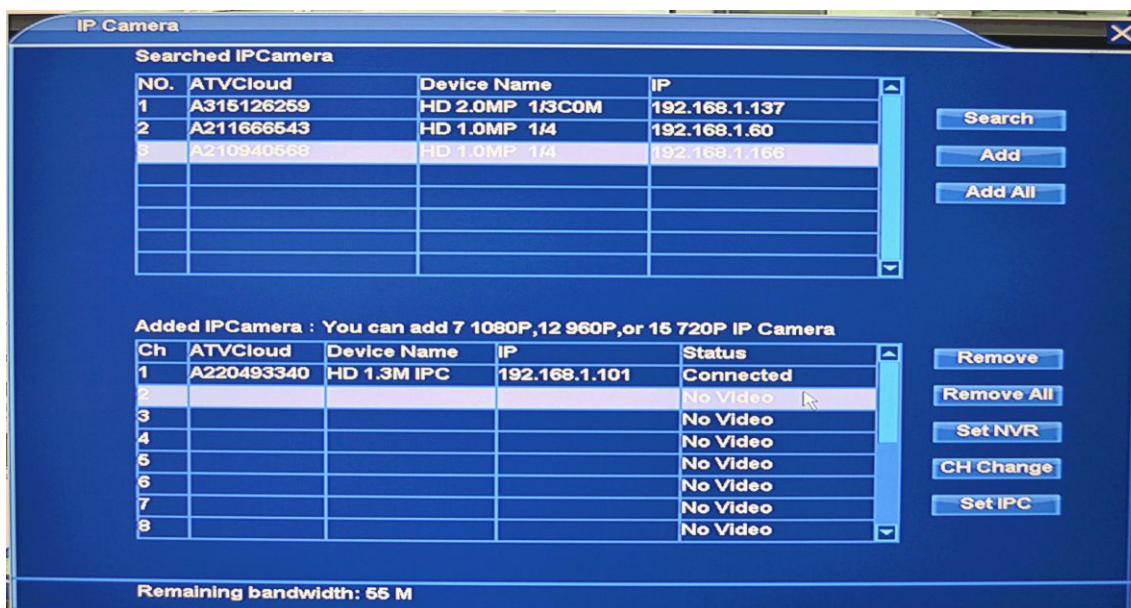


Unconnect setps:

Click any ip camera of the right device list,Click [Remove],can unconnected this connection.Click [Remove All],can unconnect all connection.

5. Remote Connection with CMS


Open CMS,in the login interface,select “Device ID Login”,Enter the Device ID,Click Advanced button,Enter the network username and password, Click Login button,then can login successful and connected the NVR Device.

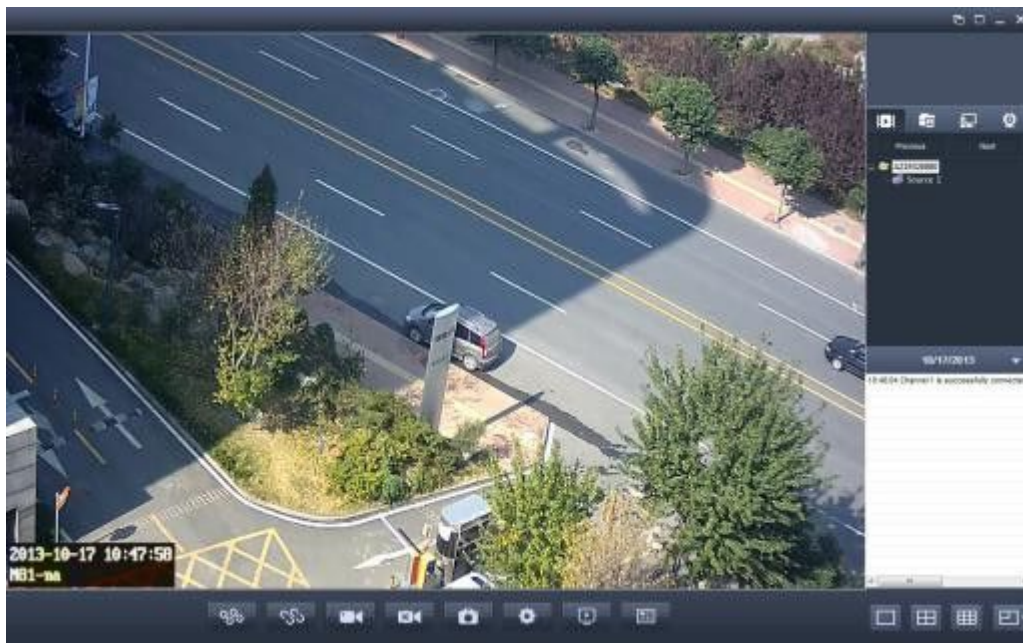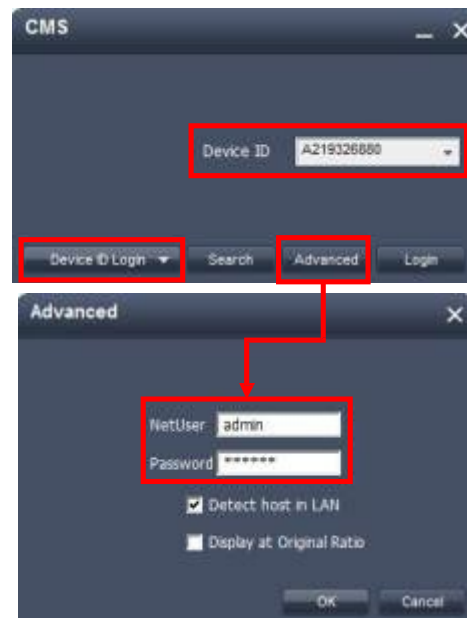


6. Remote Connection with IE

Open IE with <http://www.atvcloud.com> ,select “Device ID”,Enter the Device ID,and the network username and password,Click the [Login] button,then can login the IE

system and connected the NVR Device.

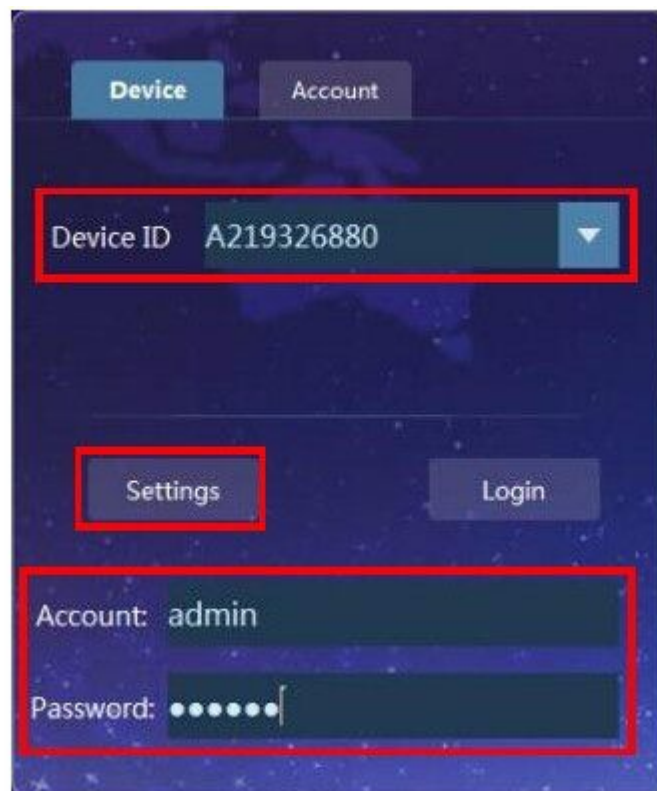



The screenshot shows the login page of an NVR system. At the top, there are two tabs: "Device" (selected) and "Account". Below the tabs, there is a "Device ID" field with the value "A219326880" and a dropdown arrow. Below this, there are two buttons: "Settings" and "Login". At the bottom, there are two input fields: "Account" with the value "admin" and "Password" with a masked password (represented by dots).

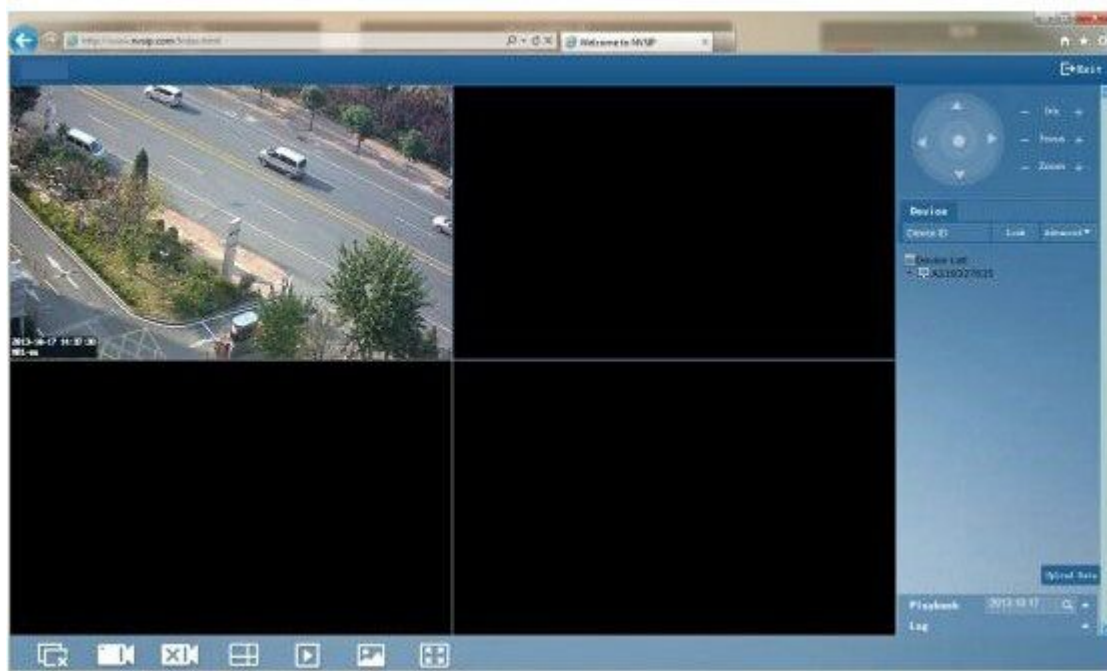


7. Remote Connection with Mobile Phone

1. Download the APP and install it, after installation, register a user, then login with this user.

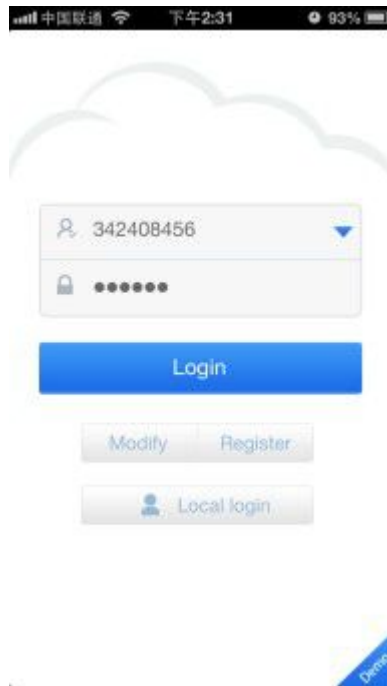

2. After Login, Click the button , Add Device, Enter the Device ID and network username and password.

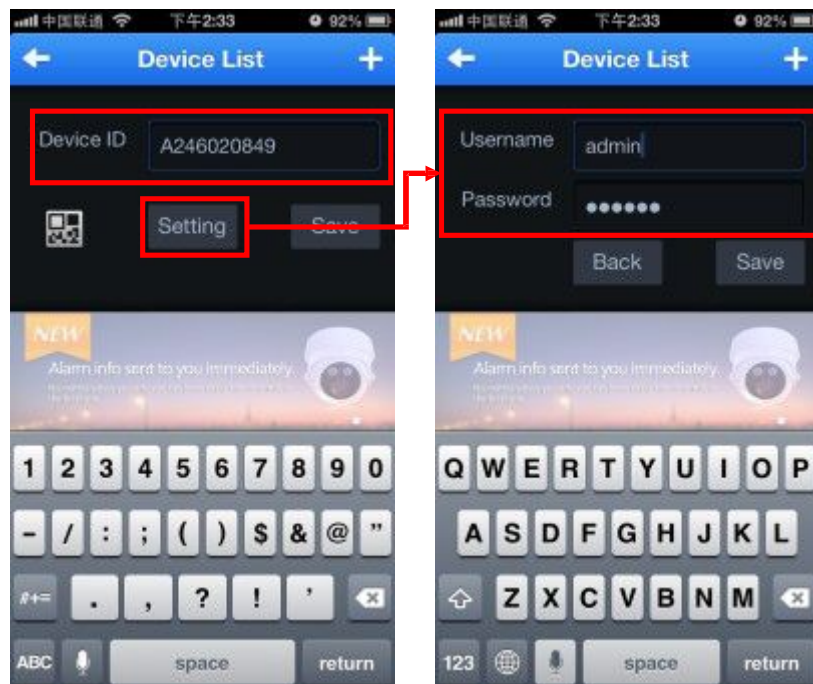

2. Click [Save] button, then Add this Device successful.



3. Click this Device, select one channel, can connect the Device, if you want to see other channels, you can sliding around the picture.

